



motorola



---

# User's Guide

Digital Video Baby Monitor

Models: MBP867, MBP867-2, MBP867-3, MBP867-4

*The features described in this User's Guide are subject to modifications without prior notice.*

# Welcome...

## *to your new Motorola Video Baby Monitor!*

Thank you for purchasing the Motorola Video Baby Monitor. Now you can see and hear your baby sleeping in another room or you can monitor your older children in their playroom.

Please retain your original dated sales receipt for your records.

For warranty service of your Motorola product, you will need to provide a copy of your dated sales receipt to confirm warranty status. Registration is not required for warranty coverage.

For product related questions, please call:

US and Canada 1-888-331-3383

Email: [support@motorolamonitors.com](mailto:support@motorolamonitors.com)

---

This User's Guide provides you with all the information you need to get the most from your product.

 
Before initial use of the Baby Monitor we recommend you fully charge the battery in the Parent Unit, so that it continues to work if you disconnect it from the Power Supply to carry it to another location. Please read the Safety Instructions on page 6 before you install the Units.

## **Got Everything?**

- 1 x Parent Unit
- 1 x Baby Unit (Camera)
- 1 x Power adapter for the Parent Unit
- 1 x Power adapter for the Baby Unit

In multi-camera packs, you will find additional Baby Units with power adapters.

# Overview of the Parent Unit

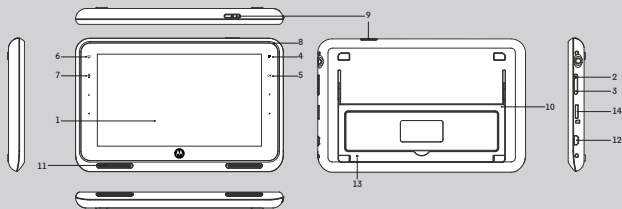






1. Display (LCD screen)
2. Vol + Key Press to adjust volume up.
3. Vol - Key Press to adjust volume down.
4. Menu Key Press to open the menu options.
5. OK key, press **OK**  
Press and hold the OK key for 4 seconds, a snap shot of the display will be saved in the Micro SD card inside the DCIM folder.
6. Video ON/OFF Key Press to turn the video ON/OFF.
7. Talk Key Press and hold to speak to your baby.
8. Microphone
9. Power Key Press and hold to turn the Unit ON/OFF.
10. Stand
11. Speaker
12. USB power adapter socket
13. Reset Key  
Use a pin to reset the device if needed (ie: screen freezes or unstable).
14. Micro SD Card Slot

 
## Parent unit menu icons

	Signal Level (4 Levels)
	Night Vision Mode (Screen changes to Black/White)
	Talk Mode
	Battery Level Control (4 Levels)
	Volume Level Control (8 Levels)
	Zoom Level Control
	Brightness Level Control (8 Levels)
	Lullaby Control (5 Song Selections)
	Alarm Setting

## Parent unit menu icons (cont'd)

	Temperature Reading (HH °C / °F or LL °C / °F) Icon & readings turn RED > 29°C / 84°F, and reading display HH °C / °F > 36°C / 97 °F Icon & readings turn RED < 14°C / 57°F, and reading display LL °C / °F < 1°C / 34 °F
	Cam Control (scan, view, add, delete)
	Screen viewing mode control (Single Screen, 2-split Screen)
	Set Video On Timer (5 min, 30 min, 60 min)
	Playback snap shots from memory card

## Overview of Your Baby Unit

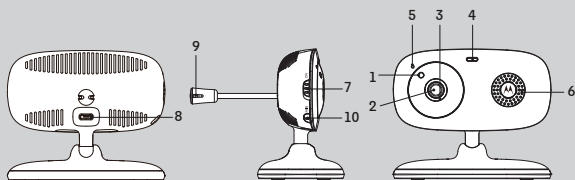

1. Light Sensor (Night Vision Mode)
2. Camera Lens
3. Infrared LEDs
4. Power LED
5. Microphone
6. Speaker
7. ON/OFF Switch
8. Power Adapter Socket
9. Temperature Sensor
10. Pair Key

## Important guidelines for installing your Baby Monitor

- To use your Video Monitor Baby and Parent Units together, you must be able to establish a radio link between them, and the range will be affected by environmental conditions.
- Any large metal object, like a refrigerator, a mirror, a filing cabinet, metallic doors or reinforced concrete between the Baby and Parent Unit may block the radio signal.
- The signal strength may also be reduced by other solid structures, like walls, or by radio or electrical equipment, such as TVs, computers, cordless or mobile phones, fluorescent lights or dimmer switches.
- Use of other 2.4 GHz products, such as wireless networks (Wi-Fi® routers), Bluetooth® systems, or microwave ovens, may cause interference with this product, so keep the baby monitor away at least 5ft (1.5m) from these types of products, or turn them off if they appear to be causing interference.
- If the signal is weak, try moving the Parent and/or the Baby Unit to different positions in the rooms.

# Table of Contents

<b>1. Safety Instructions .....</b>	<b>6</b>
<b>2. Getting Started .....</b>	<b>8</b>
2.1 Baby Unit Power Supply .....	8
2.2 Parent Unit Power Supply .....	8
2.3 Registration (Pairing) .....	9
<b>3. Using the Baby Monitor .....</b>	<b>10</b>
3.1 Set Up .....	10
3.2 Night Vision Mode .....	10
3.3 Talk Mode .....	10
3.4 Video ON/OFF .....	10
3.5 Temperature Display (HH °C / °F or LL °C / °F) .....	10
<b>4. Parent Unit Menu Options .....</b>	<b>11</b>
4.1 Volume .....	11
4.2 Brightness .....	11
4.3 Lullaby .....	11
4.4 Zoom .....	11
4.5 Alarm .....	12
4.6 Camera Control .....	12
4.6.1 Add (pair) a Camera .....	12
4.6.2 View a Camera .....	12
4.6.3 View Multi-Cameras on the screen .....	13
4.6.4 Delete a Camera .....	13
4.6.5 Scan Camera .....	13
4.7 Temperature .....	14
4.8 Power Saving Mode .....	14
4.9 Snap shots .....	14
<b>5. Disposal of The Device (environment) .....</b>	<b>15</b>
<b>6. Cleaning .....</b>	<b>16</b>
<b>7. Help .....</b>	<b>17</b>
<b>8. General Information .....</b>	<b>19</b>

 


## 1. Safety Instructions



### WARNING:

**STRANGULATION HAZARD:** Children have **STRANGLED** in cords. Keep this cord out of the reach of children (more than 3ft (1m) away) from the crib. Do not use with an extension cord. Only use the AC Adapters provided.

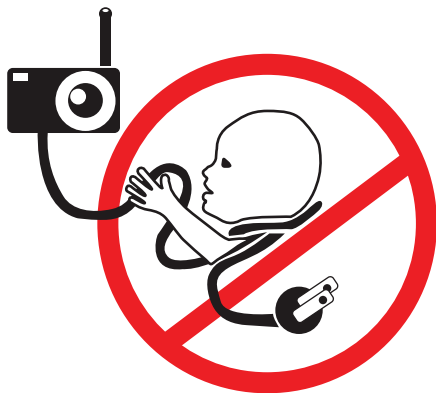

## CAMERA SET UP & USE:

- Determine a location for the Baby Unit that will provide the best view of your baby in his/her crib.
- Place the BABY UNIT on a flat surface, such as a dresser, bureau, or mount the Unit to a wall (remove or shelf) securely using the keyhole slots under the stand.
- NEVER place the Baby Unit or cords within the crib.
- Do not place the Baby Unit within reach of the baby (the unit and cords should be more than 3 feet away).

 
### WARNING

*This Digital Video Baby Monitor is compliant with all relevant standards regarding electromagnetic fields and is, when handled as described in the User's Guide, safe to use. Therefore, always read the instructions in this User's Guide carefully before using the device.*

- Adult assembly is required. Keep small parts away from children when assembling.
- This product is not a toy. Do not allow children to play with it.
- This Baby Monitor is not a substitute for responsible adult supervision.
- Keep this user's guide for future reference.
- Do not place the Baby Unit or cords in the crib or within reach of the baby (Unit and cords should be more than 3 feet away)
- Do not cover the Baby Monitor with ie: towels or blankets.
- Never use extension cords with the power adapters. Only use the chargers and power adapters that were provided.
- Test this Monitor and all its functions so that you are familiar with it prior to actual use.
- Do not use the Baby Monitor near water.
- Do not install the Baby Monitor near a heat source.
- Do not touch the plug contacts with sharp or metal objects.

 
## 2. Getting Started

### 2.1 Baby Unit Power Supply

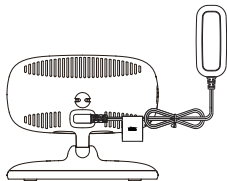


1. Connect the USB plug of the power adapter to the Baby Unit (camera) and the other end to the electrical outlet.
2. Slide the ON/OFF switch to the ON position. The power LED will light up in blue.
3. Slide the ON/OFF switch to the OFF position to turn the Baby Unit OFF.


### 2.2 Parent Unit Power Supply

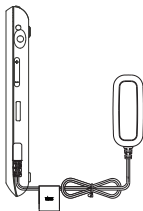


#### **IMPORTANT**

*Charging the Parent Unit fully before initial use is recommended.*

1. Connect the USB plug of the power adapter to the Parent Unit and the other end to the electrical outlet.
2. Press and hold the  POWER ON/OFF button for 2 seconds to turn the Parent Unit ON.
3. Once the Baby and Parent Units are switched ON, the display on the Parent Unit will show the video captured by the Baby Unit.

4. If there is no connection or you are out of range, the video display will go Off and the Unit will beep every 5 seconds. Move the Parent Unit closer to the Baby Unit until the link is re-established.
5. Press and hold the  POWER ON/OFF button, until the progress bar finishes scrolling, to turn OFF the Parent Unit.

### NOTE

The battery icon  turns RED to indicate that the battery is low, and will beep every 16 seconds. Thus indicating the battery will need to be charged and will take approximatively 12 hours.

 

 


 
 

### When Charging

1. When powering OFF, when the adapter is plugged in, the adapter logo will display on screen followed by a flashing battery logo for 45 seconds.
2. When powering ON, when adapter is plugged in, the battery icon on screen's top right corner will show that the battery is charging.

## 2.3 Registration (Pairing)

The Baby Monitor is pre-registered to your Parent Unit. You do not need to register it again unless the Baby Unit loses its link with the Parent Unit.

To re-register your Baby Unit, or register a new Baby Unit, follow the procedures below:

1. Press the  button of the Parent Unit and the menu bar will pop up.
2. Press the  LEFT button or  RIGHT button until  is highlighted, and the del/add/view/scan menu will pop up.
3. Press the  UP button or  DOWN button to select add, then press the OK button to confirm.
4. cam 1 / cam 2 / cam 3 / cam 4 will pop up, press the  UP button or  DOWN button to select the desired Camera and then press the OK button to start searching for a Camera Unit.
5. Press the OK button to confirm.
6. Press and hold the PAIR button on side of the Baby Unit until the Parent Unit finds the Camera, beeps and then the video from the Camera will appear.

### NOTE

If a particular Baby Unit was registered previously, registering the current Baby Unit will overwrite the old registration.

## 3. Using the Baby Monitor


### 3.1 Set Up

- Place the baby unit in a convenient location (ie: on a table) and point the camera lens towards the area you wish to monitor.
- Adjust the Baby Unit's head angle by rotating the Camera up, down, left or right until you are satisfied with the image on the Parent Unit.



#### NOTE

*Do not place the Baby Unit within the baby's reach! If there is interference with the picture or sound, try moving the Units to different locations or ensure they are not close to other electrical equipment.*


### 3.2 Night Vision Mode

The Baby Unit has 7 high-intensity infrared LEDs for picking up clear images in the dark. When the built-in light sensor on the top of the Unit detects a low level of ambient light, the LEDs will automatically activate and the screen on the Parent Unit will display in black and white. The  icon will be displayed at the top of the screen.

### 3.3 Talk Mode

Press and hold the  TALK button on the Parent Unit to talk to your baby through the Baby Unit's loudspeaker. The  icon will be displayed at the top of the LCD screen.

### 3.4 Video ON/OFF



Press the  VIDEO ON/OFF key to turn the LCD display ON/OFF but still leaving the Audio Monitor ON.

### 3.5 Temperature Display (HH °C / °F or LL °C / °F)



The temperature reading from the temperature sensor at the back of the Baby Unit will be displayed at the top of the LCD screen. The readings will turn RED if the temperature goes above 29°C / 84°F or below 14°C / 57°F. The reading will change to HH °C / °F if the temperature goes above 36°C / 97°F. The reading will change to LL °C / °F if the temperature goes below 1°C / 34°F.

## 4. Parent Unit Menu Options

 





### 4.1 Volume

1. Press the  VOL UP button or  VOL DOWN button to select the desired volume level, the volume will increase / decrease respectively. (The default volume level setting is 3.)



*TIP*

Another method to change volume level is by pressing the  /  on the front panel.

 





### 4.2 Brightness

1. Press the  button and the menu bar will pop up.
2. Press the  LEFT button or  button until  is highlighted.
3. Press the  UP button or  DOWN button to select the brightness level settings. (The default brightness setting is level 4.)

 







*TIP*

Another method to change brightness level is by pressing the  /  on the panel.

### 4.3 Lullaby

1. Press the  button and the menu bar will pop up.
2. Press the  LEFT button or  button until  is highlighted.
3. Press the  UP button or  DOWN button to select the desired song from the 5 lullabies available. (The default setting is lullaby OFF)

### 4.4 Zoom

1. Press the  button and the menu bar will pop up.
2. Press the  LEFT button or  button until  is highlighted.
3. Press the  UP button or  DOWN button to select the  icon to turn on zoom function and the  icon to turn off zoom function.

### 4.5 Alarm



1. Press the button and the menu bar will pop up.
2. Press the LEFT button or RIGHT button until is highlighted.
3. Press the UP button or DOWN button to select the alarm time. (The default setting is Alarm OFF.)

## 4.6 Camera Control

### 4.6.1 Add (pair) a Camera

1. Press the button and the menu bar will pop up.
2. Press the LEFT button or RIGHT button until is highlighted, and the del/add/view/scan menu will pop up.
3. Press the UP button or DOWN button to select add, and press the **OK** button to confirm.
4. cam 1 / cam 2 / cam 3 / cam 4 will pop up, press the UP button or DOWN button to select the desired Camera, and press the **OK** button to start searching for a Camera Unit.
5. Press and hold the **PAIR** button on side of the Baby Unit until the Parent Unit finds the Camera, beeps and the picture from the Camera appears.

#### NOTE

*A camera can only be registered to one Parent Unit at any one time.*

### 4.6.2 View a Camera

 

1. Press the button and the menu bar will pop up.
2. Press the LEFT button or RIGHT button until is highlighted and the del/add/view/scan menu pops up.
3. Press the UP button or DOWN button to select view, and press the **OK** button to confirm.
4. cam 1 / cam 2 / cam 3 / cam 4 will pop up, press the UP button or DOWN button to select desired CAM, and press the **OK** button to view the picture from that Camera.

#### TIP

 

*Quick Method to view the Cameras instead of entering into the menu bar.  
Press **OK** repeatedly to select cam 1, cam 2, cam 3, cam 4, scan.*



### 4.6.3 View Multi-Cameras on the screen

1. Press the  button and the menu bar will pop up.
2. Press the ◀ LEFT button or ▶ RIGHT button until  icon is highlighted.
3. Press the ▲ UP button or ▼ DOWN button to select 2-split screen ON/OFF.

 

### 4.6.4 Delete a Camera

1. Press the  button and the menu bar will pop up.
2. Press the ◀ LEFT button or ▶ RIGHT button until  is highlighted, and the del/add/view/scan menu will pop up.
3. Press the ▲ UP button or ▼ DOWN button to select del, and press the OK button to confirm.
4. cam 1 / cam 2 / cam 3 / cam 4 will pop up, press the ▲ UP button or ▼ DOWN button to select the desired Camera, and then press the OK button to delete that registration.

**Note:**

*You are not allowed to delete a Camera if it is the only one registered.*

### 4.6.5 Scan Camera

1. Press the  button and the menu bar will pop up.
2. Press the ◀ LEFT button or ▶ RIGHT button until  is highlighted, and the del/add/view/scan menu will pop up.
3. Press the ▲ UP button or ▼ DOWN button to select scan, and press the OK button to confirm.
4. The screen will then display images from different registered cameras in a loop of cam 1 / cam 2 / cam 3 / cam 4, changing about every 12 seconds.

**TIP**

 





*Quick Method to view Cameras instead of entering into the menu bar.  
Press OK repeatedly to select cam 1, cam 2, cam 3, cam 4, scan.*



 





## 4.7 Temperature

1. Press the  button and the menu bar will pop up.
2. Press the  LEFT button or  RIGHT button until  is highlighted.
3. Press the  UP button or  DOWN button to select °C or °F.

## 4.8 Power Saving Mode

1. Press the  button and the menu bar will pop up.
2. Press the  LEFT button or  RIGHT button until  is highlighted.
3. Press the  UP button or  DOWN button to select auto video OFF after 5, 30 or 60 minutes.

## 4.9 Taking, viewing and deleting Snap shots

1. Press and hold the OK key for 4 seconds during Video stream mode to save Snap shots on the memory card.
2. To view the Snap shots, press the  button and the menu bar will pop up.
3. Press the  LEFT button or  RIGHT button until  is highlighted.
4. Press the OK button to playback Snap shots.
5. Press the  LEFT button or  RIGHT button to view the next or previous photo.
6. To delete the Snap shots, press and hold OK key for 4 seconds and press it again to confirm. Pressing other keys will abort deletion of Snap shots.

## 5. Disposal of The Device (environment)

At the end of the product lifecycle, you should not dispose of this product with normal household waste. Take this product to a collection point for the recycling of electrical and electronic equipment. The symbol on the product, user's guide and/or box indicates this.



Some of the product materials can be reused if you take them to a recycling point. By reusing some parts or raw materials from used products you make an important contribution to the protection of the environment.

Please contact your local authorities in case you need more information on the collection points in your area.

## **6. Cleaning**

Clean the Baby Monitor with a slightly damp cloth or an anti-static cloth. Never use cleaning agents or abrasive solvents.



### **Cleaning and Care**

- Do not clean any part of this product with thinners or other solvents or chemicals -- this may cause permanent damage to the product which is not covered by the warranty.
- Keep your Baby Monitor away from hot, humid, strong sunlight and do not let the Units get wet.
- Every effort has been made to ensure high standards of reliability for your Baby Monitor. However, if something does go wrong, please do not try to repair it yourself -- contact Customer Service for assistance.

## 7. Help

### Display

#### *No Display*

- Try recharging the Parent Unit.
- Reset the Units. Unplug both the units' electrical power, then plug them back in.
- Is the Unit ON?  
Press and hold the POWER ON/OFF button  on the parent unit to turn it ON.
- Is the correct Camera selected?  
Change the Camera number, if necessary.
- Is the Video Display turned ON?  
Press the VIDEO ON/OFF button  to turn On.
- When operating using the batteries only, the display will go blank after 5, 30 or 60 minutes to save power (depending on video on setting). Be advised the unit is still active and will give you audio alerts. You can reactivate the screen by pressing any button.

### Registration

#### *If the Baby Unit has lost its link with the Parent Unit*

- Try recharging the Parent Unit.
- If the Baby Unit is too far away it may be going out of range, move the Baby Unit closer to the Parent Unit.
- Reset the Units by disconnecting them from the electrical power. Wait about 15 seconds before reconnecting. Allow up to one minute for the Baby Unit and the Parent Unit to synchronize.
- See 2.3 Registration (Pairing), if there is a need to re-register the Unit.

## Interference

### ***Noise interference on your parent unit***

- Your Baby and Parent Units may be too close. Move them farther apart.
- Make sure there is at least 3 to 6 feet between the Units to avoid audio feedback.
- If the Baby Unit is too far away it may be out of range, move the Units closer together.
- Make sure the Units are not near other electrical equipment, such as a television, computer or cordless/mobile telephone.
- Use of other 2.4 GHz products, such as wireless networks (Wi-Fi® routers), Bluetooth® systems, or microwave ovens, may cause interference with this product, so keep the Baby Monitor away at least 5ft (1.5m) from these types of products, or turn them OFF if they appear to be causing interference.
- If the signal is weak, try moving the Parent and/or Baby Unit to different positions in the rooms.

## 8. General Information

If your product is not working properly....

1. Read this User's Guide or the Quick Start Guide.
2. Contact Customer Service:  
US and Canada 1-888-331-3383  
Email: support@motorolamonitors.com

### Consumer Products and Accessories Limited Warranty ("Warranty")

Thank you for purchasing this Motorola branded product manufactured under license by Binatone Electronics International LTD ("BINATONE").

#### ***What Does this Warranty Cover?***

Subject to the exclusions contained below, BINATONE warrants that this Motorola branded product ("Product") or certified accessory ("Accessory") sold for use with this product that it manufactured to be free from defects in materials and workmanship under normal consumer usage for the period outlined below. This Warranty is your exclusive warranty and is not transferable.

#### ***Who is covered?***

This Warranty extends only to the first consumer purchaser, and is not transferable.

#### ***What will BINATONE do?***

BINATONE or its authorized distributor at its option and within a commercially reasonable time, will at no charge repair or replace any Products or Accessories that does not conform to this Warranty. We may use functionally equivalent reconditioned/ refurbished/ pre-owned or new Products, Accessories or parts.

### ***What Other Limitations Are There?***

ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR OR REPLACEMENT PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. IN NO EVENT SHALL MOTOROLA OR BINATONE BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT OR ACCESSORY, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS OR ACCESSORIES TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.

Some jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights, and you may also have other rights that vary from one jurisdiction to another.

Products Covered	Length of Coverage
Consumer Products	<b>One (1) year</b> from the date of the products original purchase by the first consumer purchaser of the product.
Consumer Accessories	<b>Ninety (90) days</b> from the date of the accessories original purchase by the first consumer purchaser of the product.
Consumer Products and Accessories that are Repaired or Replaced	<b>The balance of the original warranty or for Ninety (90) days</b> from the date returned to the consumer, whichever is longer.

## Exclusions

**Normal Wear and Tear.** Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

**Batteries.** Only batteries whose fully charged capacity falls below 80% of their rated capacity and/or batteries that leak are covered by this Warranty.

**Abuse & Misuse.** Defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or (d) other acts which are not the fault of MOTOROLA or BINATONE, are excluded from coverage.

**Use of Non-Motorola branded Products and Accessories.** Defects or damage that result from the use of Non-Motorola branded or certified Products or Accessories or other peripheral equipment are excluded from coverage.

**Unauthorized Service or Modification** Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than MOTOROLA, BINATONE or its authorized service centers, are excluded from coverage.

**Altered Products** Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola branded housings, or parts, are excluded from coverage.

**Communication Services** Defects, damages, or the failure of Products or Accessories due to any communication service or signal you may subscribe to or use with the Products or Accessories is excluded from coverage.

### ***How to Obtain Warranty Service or Other Information?***

To obtain service or information, please call:

US and Canada 1-888-331-3383

Email: [support@motorolamonitors.com](mailto:support@motorolamonitors.com)

You will receive instructions on how to ship the Products or Accessories at your expense and risk, to a BINATONE Authorized Repair Center.

To obtain service, you must include: (a) the Product or Accessory; (b) the original proof of purchase (receipt) which includes the date, place and seller of the Product; (c) if a warranty card was included in your box, a completed warranty card showing the serial number of the Product; (d) a written description of the problem; and, most importantly; (e) your address and telephone number.

These terms and conditions constitute the complete warranty agreement between you and BINATONE regarding the Products or Accessories purchased by you, and supersede any prior agreement or representations, including representations made in any literature publications or promotional materials issued by BINATONE or representations made by any agent, employee or staff of BINATONE, that may have been made in connection with the said purchase.

## FCC and IC regulations

### FCC Part 15

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the Federal Communications Commission (FCC) rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Privacy of communications may not be ensured when using this device.

To ensure safety of users, the FCC has established criteria for the amount of radio frequency energy that can be safely absorbed by a user or bystander according to the intended usage of the product. This product has been tested and found to comply with the FCC criteria. The Baby Unit shall be installed and used such that parts of the user's body other than the hands are maintained at a distance of approximately 8 inches (20 cm) or more.

This Class B digital apparatus complies with Canadian ICES-003.

CAN ICES-3(B)/NMB-3(B)

## **WARNING**

Changes or modifications, to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The socket-outlet shall be installed near the equipment and shall be easily accessible.

### **Industry Canada**

This device complies with Industry Canada licence-exempt RSS standard(s): Operation is subject to the following Two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

The term "IC: " before the certification/registration number only signifies that the Industry Canada technical specifications were met. This product meets the applicable Industry Canada technical specifications.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

## Technical Specifications

### Baby unit (Model: MBP867BU)

Frequency	2.4 GHz to 2.48 GHz
Image sensor	color CMOS 1M Pixels
Lens	f 2.5mm, F 2.8
IR LED	7 pcs
Power	<p>Adapter: Ten Pao International Ltd.  S005ANU0500100; Input: 100-240V AC,  50/60HZ 200mA; Output: 5.0V DC, 1000mA  S006MU0500100; Input: 100-240V AC,  50/60HZ 300mA; Output: 5.0V DC, 1000mA</p> <p><b>WARNING</b>  Use only with the supplied power supply.</p>



---

**Parent unit (Model: MBP867PU)**

---

Frequency	2.4 GHz to 2.48 GHz
Display	7" Diagonal Color Screen
Display colors	16.7M color LCD
Brightness control	8 steps
Volume control	8 steps
Power	Adapter: Ten Pao International Ltd. S005ANU0500100; Input: 100-240V AC, 50/60HZ 200mA; Output: 5.0V DC, 1000mA S006MU0500100; Input: 100-240V AC, 50/60HZ 300mA; Output: 5.0V DC, 1000mA <b>WARNING</b> Use only with the provided power supply. Battery: Motorola, BF6X 3.7V, 1880mAh Lithium-Ion, rechargeable battery pack

---



motorola

Manufactured, distributed or sold by  
Binatone Electronics International LTD.,  
official licensee for this product.  
MOTOROLA and the Stylized M Logo,  
are trademarks or registered trademarks  
of Motorola Trademark Holdings, LLC.  
and are used under license. All other  
trademarks are the property of their  
respective owners. © 2015 Motorola  
Mobility LLC. All rights reserved.



EN\_US Version 11.0

Printed in China